



ROLA-CASE
ROLA Shelf

RC5D & RC7D Installation Instructions

DESIGNED IN AUSTRALIA BY:
THOMAS MOLONEY PTY LTD.
PH 02 4340 1444 FAX 02 4340 1400
EMAIL enquiry@rolacase.com
www.rolacase.com

Instructions:

Supplied:

1x DOOR Assembly
4x 1/8" pop rivets (RC5D)
6x 1/8" pop rivets (RC7D)


Required for Assembly (Not Supplied)

Pop Riveter

Procedure:

1/. Insert the Door hinges into the slots on the side of the cabinet

2/. Align hinge holes with holes in cabinet side and secure with the 1/8" pop rivets supplied

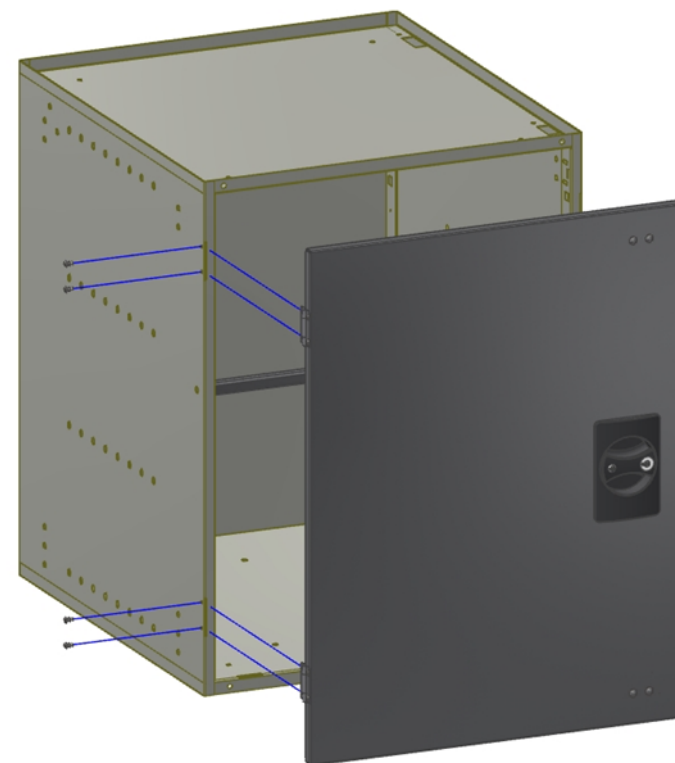

(RC5D Door shown as Example)